

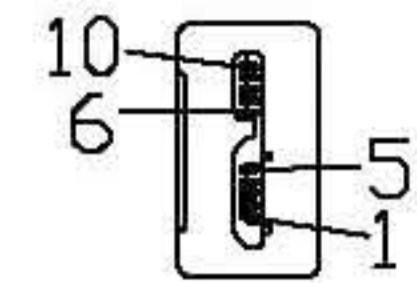
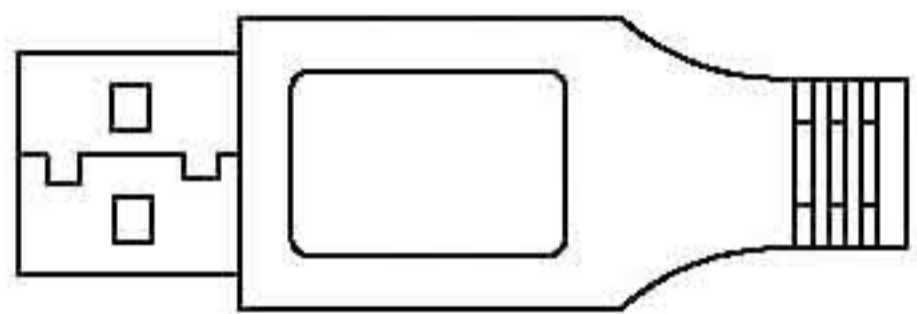
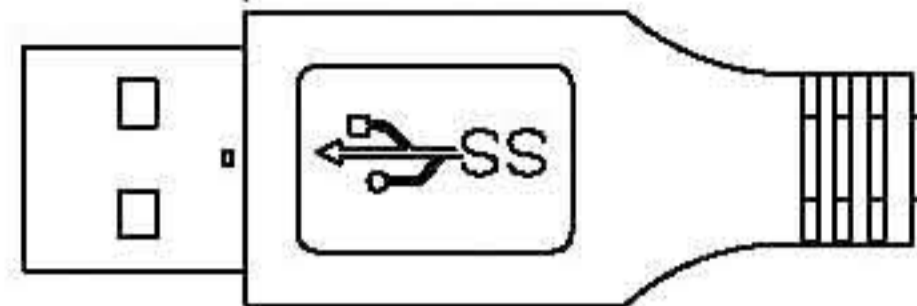


1000 ± 30MM

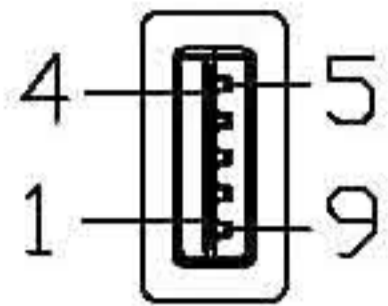

PIN OUT

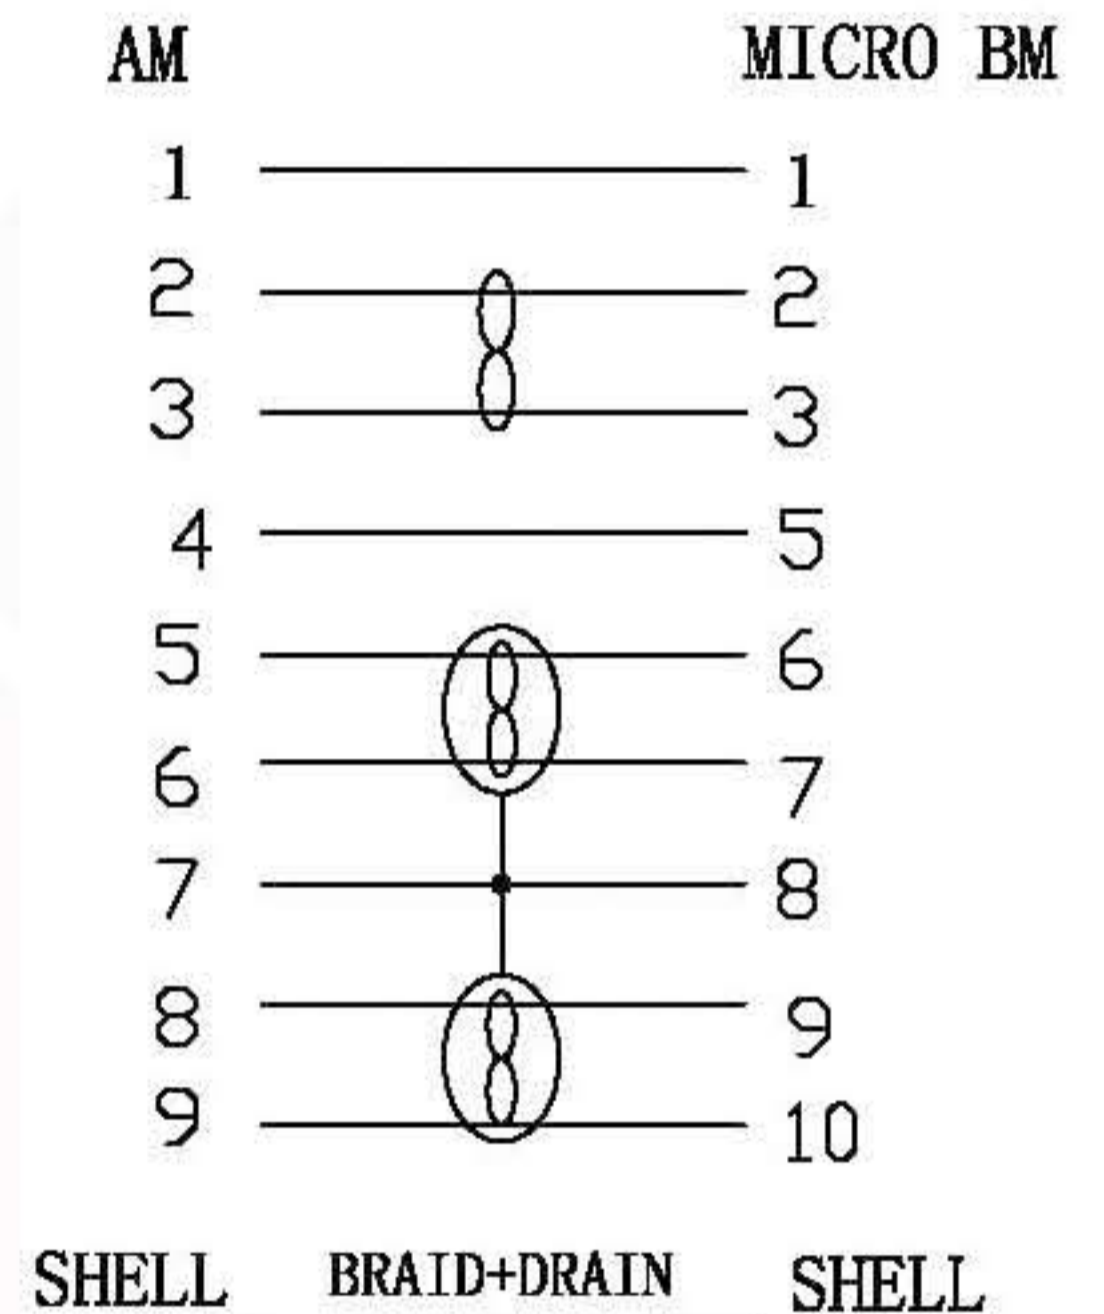

NOTES:

1. MATERIALS

1.1 CABLE: AWG32 PIMF * 2P (SS) + AWG28 * 1P (HS) + 2C AWG28 (POWER)
 DETAIL: (7/0.08BC*1P+7/0.08BC+FAM)*2PCS+7/0.12BC*2C+7/0.12BC*1P+AM+
 7/0.12BC+80/0.12ALM+BLUE PVC JACKET.
 OD=4.5 ± 0.15MM.

CABLE PRINTING: USB 3.0 SUPER SPEED CABLE

1.2 USB 3.0 AM: SOLDER TYPE, BLUE PBT INSULATION, GOLD PLATED CONTACTS, NICKEL PLATED SHELL.

1.3 USB 3.0 MICRO BM: SOLDER TYPE, BLACK PBT INSULATION, GOLD PLATED CONTACTS, NICKEL PLATED SHELL.

1.4 ALL HOODED: BLACK PVC.

2. TESTING: 100% OPEN AND SHORT TEST.

3. PACKING: 1PC/PE BAG.

4. ALL MATERIALS BE ROHS COMPLIANT.

LENGTH TOLERANCE: X. ± 0.5 .X ± 0.2 .XX ± 0.1	SCALE: FREE	CUS. NAME: EFB	USB3.0 SUPER SPEED CABLE ENHANCED	
ANGLE TOLERANCE: X° ± 3° .X° ± 1°	UNIT: mm		PRODUCT NO: K5295SW.1	CUSTOMER NO:
VERSION: 01	PAGE: 1/1		DRAWING NO: 0673	PRODUCT DESCRIPTION: USB 3.0 AM/MICRO BM



00	NEW ISSUE	2013-04-12
REV.	MODIFY DESCRIPTION	DATE